

**PowerLite MovieMate 50 / [MovieMate 55](#)**

<b><u>DESCRIPTION</u></b>	<b><u>PART NUMBER</u></b>
Soft Carrying Case	147 0526
Remote Control	146 6987
Lamp (V13H010L44)	211 8944
Power Cord (2-prong, black) est. 10'	146 7676

Order user replaceable parts from an [Epson authorized parts distributor](#).  
<http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp>

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts  
by using the “Help me find...” tool in the right column of the  
[Epson Support](#) home page.  
<http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp>